LED Batten with Sensor
INSTALLATION GUIDE: WARNING

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

DANGER – RISK OF SHOCK – TURN OFF ELECTRIC POWER AT FUSE BOX BEFORE CARRYING OUT ANY INSTALLATION WORK.

WARNING - Risk of fire or electric shock. LED surface mounted light installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Product must be installed in accordance with the National Electrical Code or your local electrical code. Contact a qualified electrician.

WARNING - Risk of fire or electric shock. Install this fixture only as shown in these instructions.

WARNING - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

WARNING - Risk of electric shock. Suitable for damp locations only. Do not use where directly exposed to water.

WARNING - Do not use if product is damaged.

- Do not use with dimmers.
- Not intended for use with emergency exits.
- These LED fixtures must be operated within an ambient fixture temperature of -4°F and +104°F (-20°C and +40°C) to comply with all safety and warranty regulations.

INSTALLATION STEPS

Sensor Installation

1. Screw in a motion sensor at both ends of the housing.

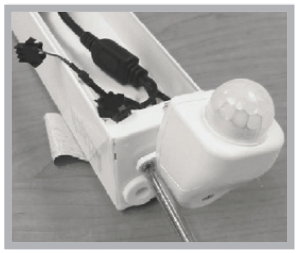

2. Connect the data cables of each sensor to the driver.

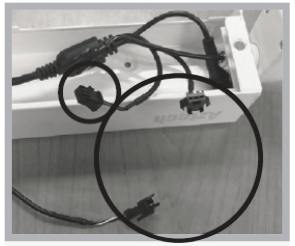

INSTALLATION STEPS

LED Module Installation

1. Connect DC jack from the LED module to the LED driver in the housing.

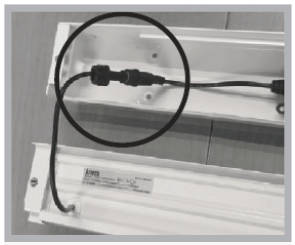

2. Slide the LED module onto the housing.

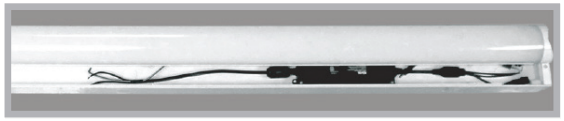

3. Fasten the LED module onto the housing with a screw, at both ends.

AC Wiring

1. Remove knockout slug located at the center of holder and slide the AC cable through the created hole.

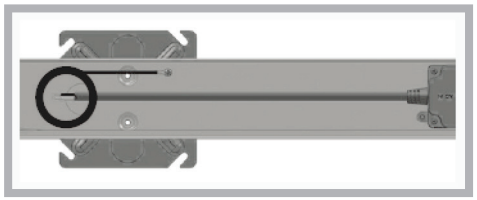

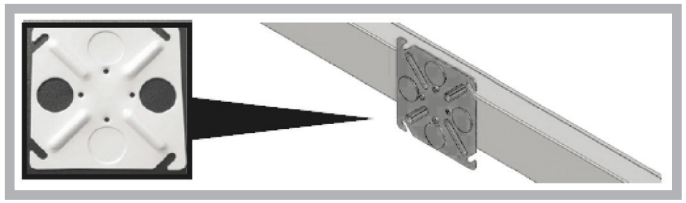

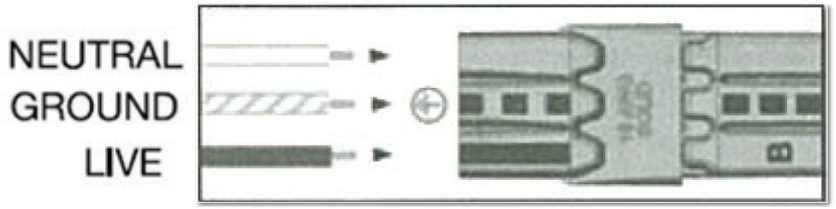

AC Diagram

AC Wiring (cont.)

2. With the AC cable at the other side of the holder, complete the necessary wiring in a junction box.

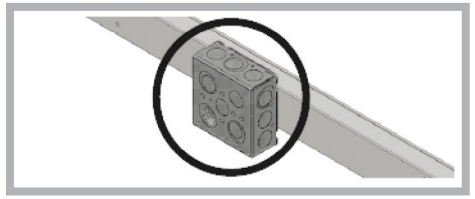

*Only the cover of junction box is included in box. The junction box and cable terminal block are NOT included in box. Contractors or installers need to source them based on local requirements.

*NOTE: Accessories are provided for optional housing installation.

(Optional) Remote Controller (Verbatim Part No. 98992)

*Remote controller is optional accessory used to change the factory settings.

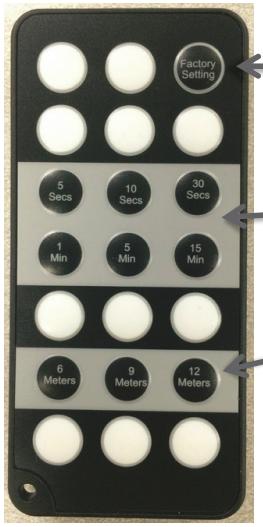

Back to Factory Setting
(5 Min, 12 Meters)

Change the period from on time to automatic dimming
(5sec / 10sec / 30sec / 1min / 5min / 15min)

Change the sensor sensitivity
(6 meters / 9 meters / 12 meters)

Press the button to change the setting.

Verbatim 5-year warranty www.verbatimlighting.com/warranty. For support, visit www.verbatimlighting.com/support. This device complies with Part 15 of FCC. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

- AMERICAS: Verbatim Americas LLC, Charlotte, NC 28262
- EUROPE/MIDDLE EAST/AFRICA: Verbatim GmbH, Düsseldorfer Straße 13, 65760 Eschborn/Germany
- AUSTRALIA/ NEW ZEALAND: Verbatim Australia Pty., Ltd., Unit 6, 450 Princes Highway, Noble Park, Victoria, 3147 Australia Tel: +61 3 9790 8999 Fax: +61 3 9790 8955 Email: support@verbatim.com.au

© 2017 Verbatim

Installation Guide

Verbatim

Verbatim LED Batten with Sensor

Technical Specifications:

Part No.	LED Tube Model No.	Input Voltage (Vac)	Input Frequency(Hz)	Input Wattage (W)	Input Current (A)
99305	BAT-4FT-W26-C50-MS-NON	100-277	50/60	26 (fully on) 8.6 (Standby)	0.08 -0.33

Fixture Dimension (inch)	Fixture Weight (lbs)	Lumen (lm)	CCT (K)	Ra	Suitable Location
50 (L) x 2.4 (W) x 3.4 (H)	5.20	3000 (fully on) 800 (standby)	5000	80	Damp Location

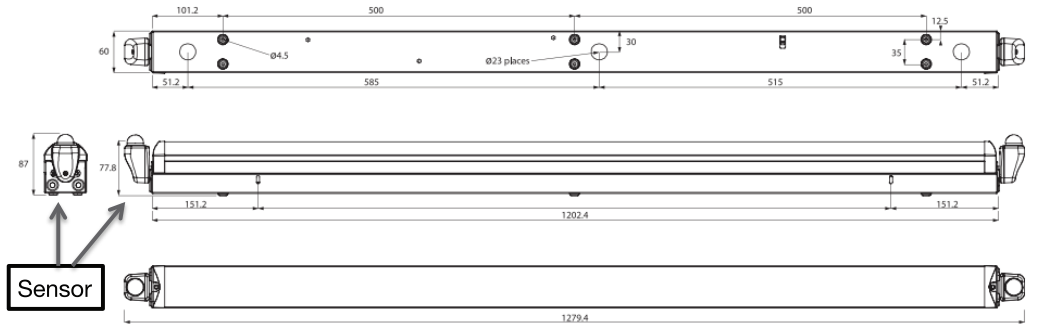

*Length in mm

Sensor Specifications (Factory Setting):

Detection Angle	Sensitivity	On Time (No Motion Detected)
140 degrees	12m	5 min

Package Contents:

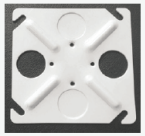
1 Junction box cover

2 Chains

3 Hangers

4 Hooks

- Plus Screws